
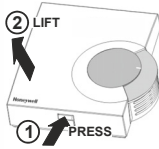
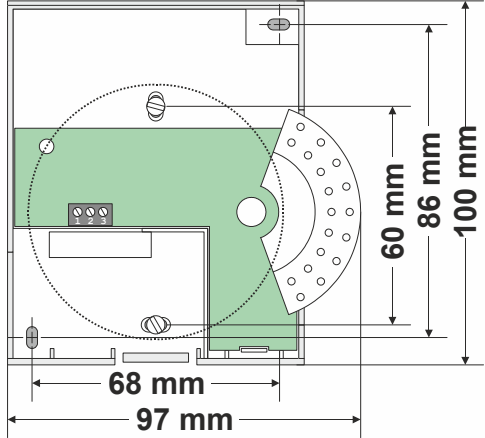
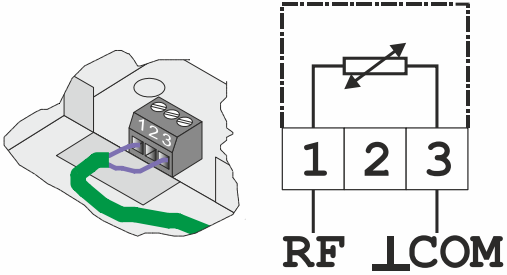
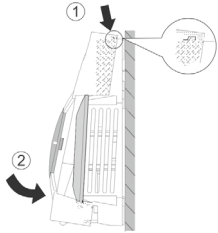
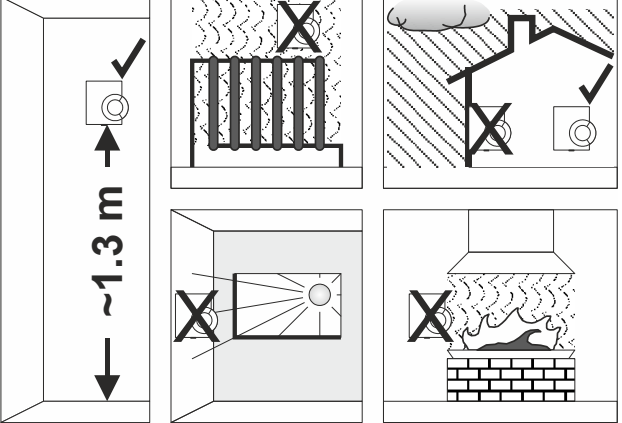
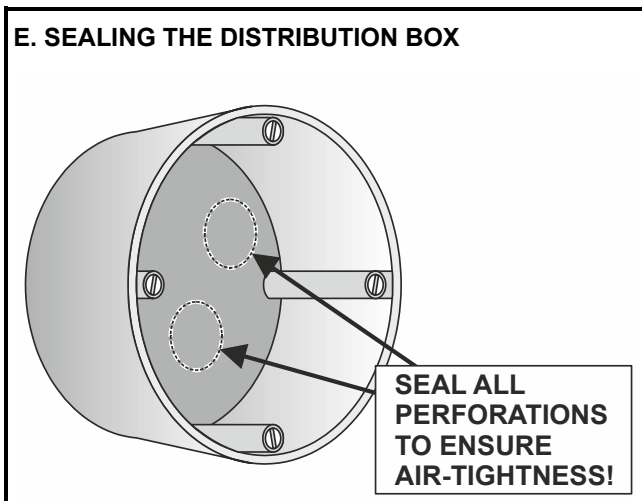


- D Montageanweisung
- DK Installationsvejledning
- ES Instrucciones de montaje
- F Instructions d'installation
- I Istruzioni di montaggio
- N Installationsinstruktioner
- NL Installatievoorschrift
- P Instruções de montagem
- S Installation instruktioner
- FI Asennusohje
- PL Instrukcja montażu

RF20 Space Temperature Sensor

MOUNTING INSTRUCTIONS

<p>A. CAUTION</p> <hr/> <p>⚠ WARNING</p> <p>Risk of electric shock or equipment damage!</p> <ul style="list-style-type: none"> ▶ Do not touch any live parts. ▶ Disconnect power supply before making connections. ▶ Do not reconnect power until installation is complete. ▶ Observe precautions for handling electrostatic sensitive devices. <div style="text-align: center;">  </div>	<p>B. REMOVING COVER, INSERTING SCREWS</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div>
<p>C. WIRING (2 x 1.5 mm²), REPLACING COVER</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div>	<p>D. INSTALLATION POSITION</p> <div style="text-align: center;">  </div>



Honeywell

Manufactured for and on behalf of the Environmental & Energy Solutions Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

Home and Building Technologies

Honeywell GmbH
Böblinger Strasse 17
71101 Schönaich, Germany
Phone +49 (0) 7031 637 01
Fax +49 (0) 7031 637 740
<http://ecc.emea.honeywell.com>

MU1B-0681GE51 R1119A

Subject to change without notice