


## TF428 RSBS/RSS Series Digital Thermostat

Fan Coil Unit Control

### SPECIFICATION DATA

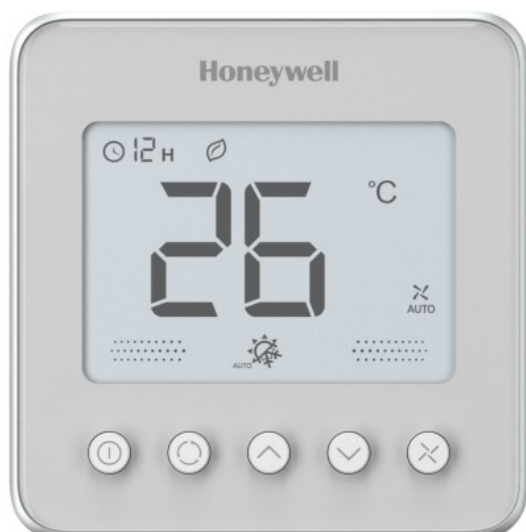

### Features

- Memorized time off
- Cycle Per Hour (CPH)
- Random startup
- Energy saving mode optional
- LCD display with friendly user interface
- Room temperature or setpoint temperature display selectable
- Manual or automatic fan speed selectable
- Temperature units in either °C or °F
- User setting can be stored when power loss
- Freeze protection function available
- Keypad lock options
- Heating and cooling setpoint limitation

### Specifications

Power supply	220/230VAC, 50/60Hz
Control	PI, on/off output
Accuracy	±1°C at 21°C
Auto Cycle times	100,000 times
Manual Cycle times	10,000 times
Protection class	IP20
Set point range	10 ~ 32°C
Display range	0 ~ 37°C
Ambient operating limits	0 ~ +49°C
Ambient storage limits	-30 ~ +60°C
Humidity limits	5~90% RH, non-condensing
Action Type:	1
Pollution Degree	2
Protection against electric shock class	Class II
Electronic control software class	Class A
Rated Impulse Voltage:	2500V
Maximum Temperature	155°C
Relay wiring	
Wire Sectional area	
(Recommendation)	1.0~1.5mm <sup>2</sup>
Applied altitude up to	2000m above sea level
Rating Capacity	
Working current for the whole product :	4(3)A
4A: When the load of the thermostat is resistance	
3A: When the load of the thermostat is inductance	
For Fan load	4(2)A
4A: when the load is resistance; 2A: When the load is inductance	
For Valve load	2(1)A
2A: when the load is resistance; 1A: when the load is inductance	
The valve need have overtravel-limit organ to turn off the load.	

### General

The TF428 RSBS/RSS series digital thermostat are designed for 3-speed fan and on/off valve control in a fan coil system, including:

- 2-pipe cool only/heat only/manual changeover
- 4-pipe manual/auto changeover(VC4013 valve only)
- Ventilation mode
- Manual or automatic 3-speed fan control
- On/off water valve control

Besides the basic controls, TF428 RSBS/RSS series featuring **CPH (Cycle Per Hour)** better maintains the room temperature to the setpoint and **Random Start-up Function** would help to maintain power grid stability.

In addition, Honeywell **Memorized Time Off Function** can automatically turn off the thermostat to save energy.


## Model Selection

<b>Product Type</b>	Thermostat for Fan Coil Control	TF							
<b>Application</b>	2/4 pipes fan coil with 3-speed fan		4						
<b>Power supply</b>	220/230 Vac, 50/60Hz			2					
				1					
<b>Valve control type</b>	On-Off				8				
	Modulating				3				
<b>Housing color</b>	white					W*			
	Black					D			
	Sliver					S			
	Rose Gold					G			
	Copper					C			
	Sliver hairline					L			
	Gold hairline					K			
<b>Programmed</b>	Default						N		
<b>Special code</b>	N/A							....X**	
	Customerized color							RSBS	
	Remote setback, small power box							RSS	
	Remote sensor, small power box								
<b>Packing Type</b>	Unit Packing								_U
	Bulk Packing								


E.g. **TF428WN-RSBS\_U**: 220/230 Vac, on-off valve control, white housing, non programmed, remote setback ,small power box, unit packing

## Product Design


### Thermostat appearance

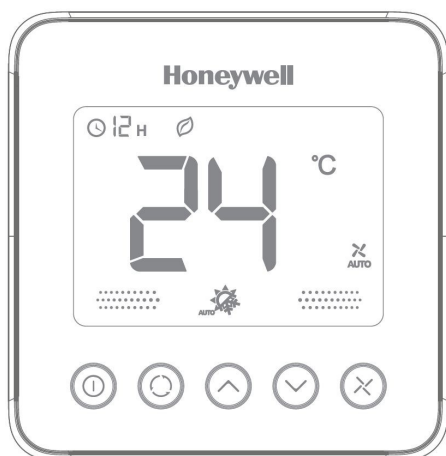

### LCD display

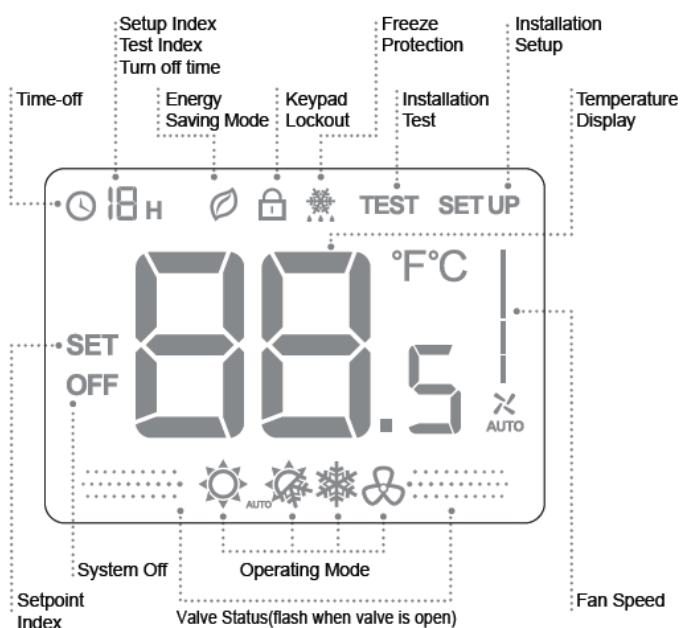

Dimensions (mm)

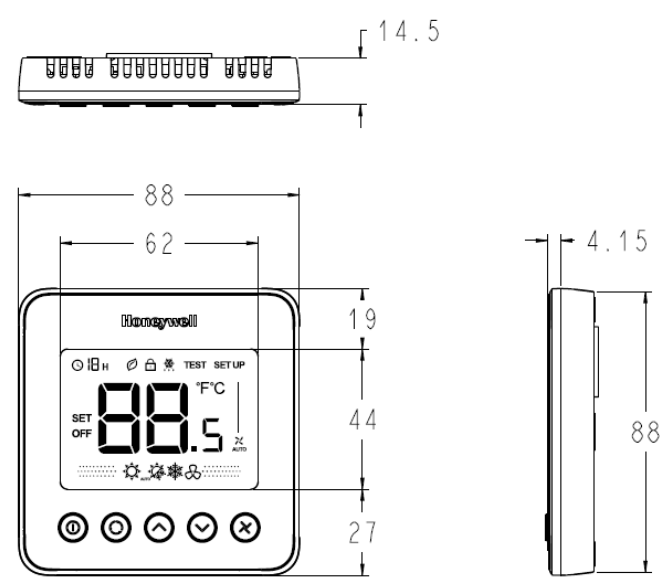

Function

Valve Control

Thermostat measures the room temperature via integrated sensor or remote temperature sensor and maintains the set-point by delivering on/off valve control command outputs. The fan setting can be selected as manual or automatic 3-speed operation. When in “manual” mode, the fan is switched to the selected speed via control output FH (high), FM (Medium) , FL (Low).

While in “automatic“ mode, fan speed depends on the difference between room temperature and setpoint. When room temperature reaches the setpoint, the valve will be closed, and the fan will be closed as well.


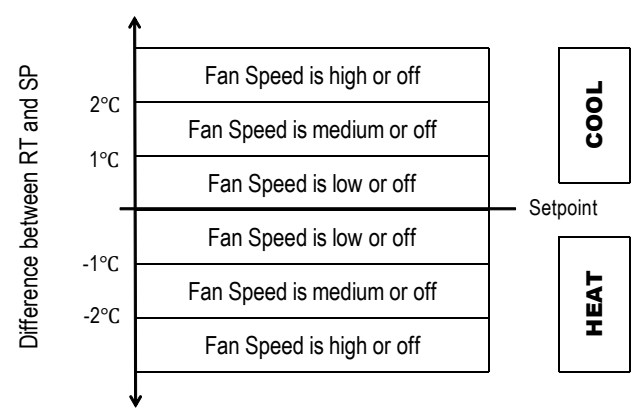


Fig. 1. Fan Speed Ramping Control Algorithm

Memorized Time Off

The memorized time off feature will automatically turn off the thermostat after a selectable amount of time. To change the time setting, press and hold the power button for more than 3 seconds and press “up” and “down” button to change the value when the thermostat is working .

**NOTE:** The setting range is from 0 to 12 hours. The step is 1 hour and the default value is 0.

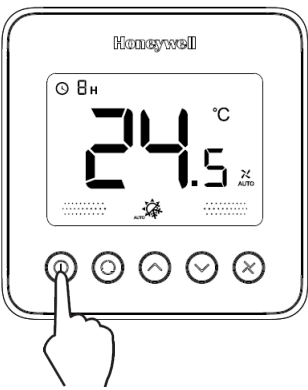

Backlight

To turn on the backlight, press any key. The backlight will timeout 8 seconds after the last key is pressed. When in ISU and Installation test mode, the backlight will timeout 60 seconds after the last key is pressed.

Keypad Lockout

Keypad lockout can be set in ISU and the default status is “all keys available”. Keypad lock can be optioned to “mode button locked”, “Fan and mode buttons locked”, “all buttons (except power button) locked” and “all buttons locked”.

Temperature Display

The displayed temperature can be set to room temperature or setpoint. The setting can be changed during ISU (Installation Set Up) process.

Cycle Per Hour (CPH)

In order to achieve more accurate temperature control, the CPH function enables the thermostat to open the valve several times per hour as the room temperature gets close to the setpoint.

The value can be changed in the ISU, the default values are 4 for heating and 3 for cooling.

## Operating Mode

### Comfort Mode


In comfort mode, the setpoint and fan speed can be changed by pressing corresponding buttons. Comfort mode including 2-pipe cool only/heat only/manual changeover and 4-pipe manual /auto changeover application.

### Energy Saving Mode

A dry contact (TF428 RSBS) or button press (press and hold the "mode" button for more than 3 seconds) can activate the energy saving mode. The dry contact can be selected as normal open or normal close in ISU.


If activated by dry contact, all buttons will be locked except the multi-key for ISU. If activated by button press, any button press can stop energy saving mode.

The setpoint will change to the remote setback heating/cooling setpoint when the energy saving mode is enabled. The heating setpoint range is 10°C to 21°C and the default is 18°C. The cooling setpoint range is 22°C to 32°C and the default is 26°C.

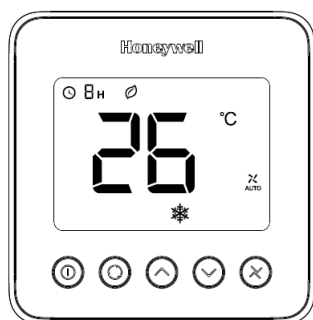

### Ventilation Mode

Press "mode" button to enter "ventilation" mode. In "ventilation" mode, no output for valve while the fan will operate at selected fan speed.

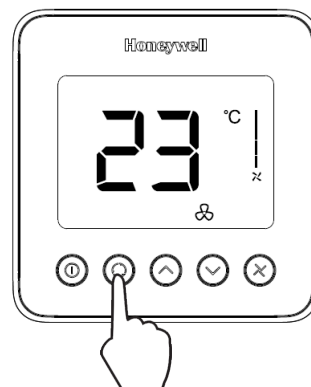

### Freeze Protection Mode

Freeze protection can be selected as disabled or enabled (default) in the ISU. In freeze protection mode (not available in 2-pipe cool only applications), when thermostat is off and the temperature is below 6°C, the thermostat will activate heating mode until the temperature rises to 8°C.




## Installation and Wiring

TF428 Series can be installed in standard 86 size junction box directly.




The screws must be locked tightly to avoid wire break off from the terminals.

The temperature of mounting box and wall should be in the operating temperature range.

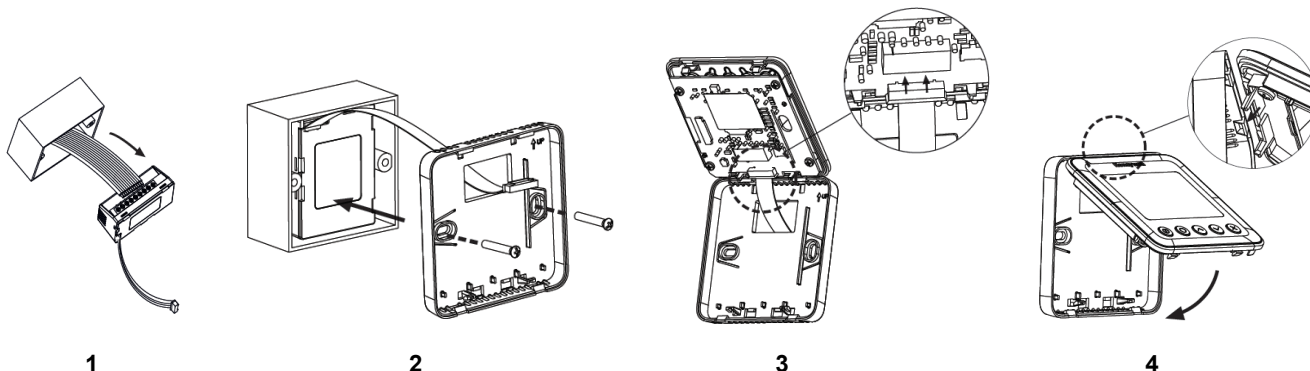


## TF428 RSBS Wiring Diagram

2

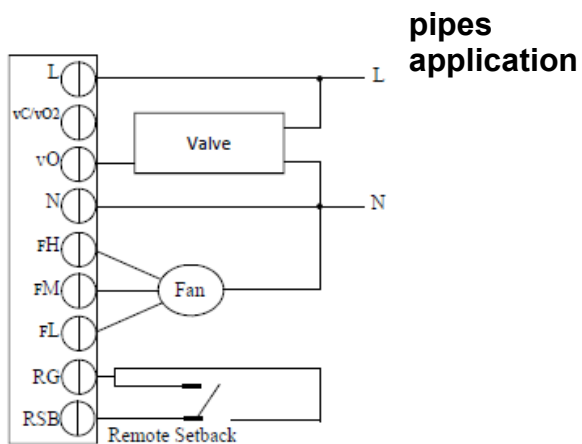


**4 pipes application**

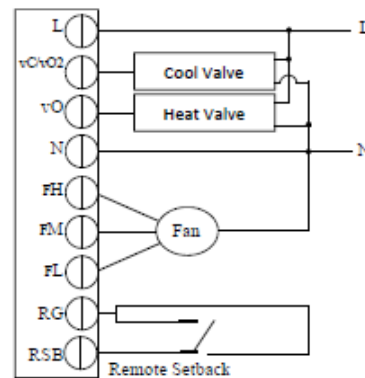

**Fig. 1. Honeywell VC4013/VN4013/VS4016 Wiring**

**Fig. 2. Honeywell VC4013/VN4013/VS4016 Wiring**

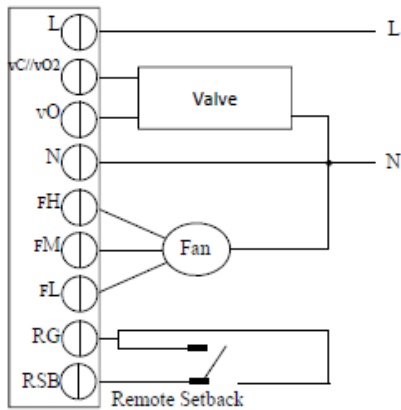

**Fig. 3. Honeywell VC6013/VN6013 Wiring**

Item	Terminal	Description
1	L	Live wire
2	vC/ vO2	Heating valve close/Cooling valve close 2 pipes only /Cooling valve open 4 pipes (VC/VN 4013) only
3	vO	Heating valve open/Cooling valve open 2 pipes only Heating valve open 4 pipes (VC/VN4013)only
4	N	Neutral wire
5	FH	High speed fan
6	FM	Medium speed fan
7	FL	Low speed fan
8	RG	Ground for remote setback
9	RSB	Remote setback

## TF428 RSS Wiring Diagram

2

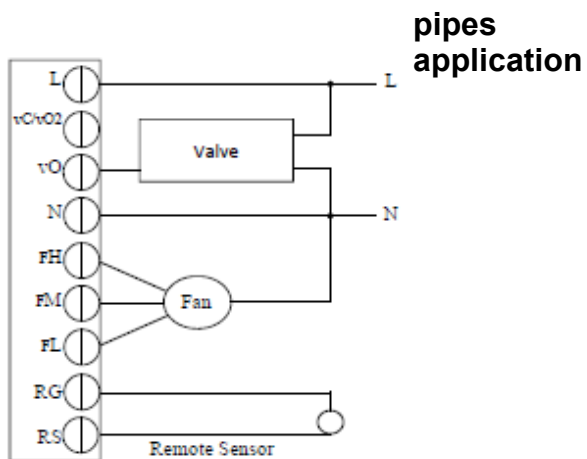


Fig. 1. Honeywell VC4013/VN4013/VS4016 Wiring

**4 pipes application**

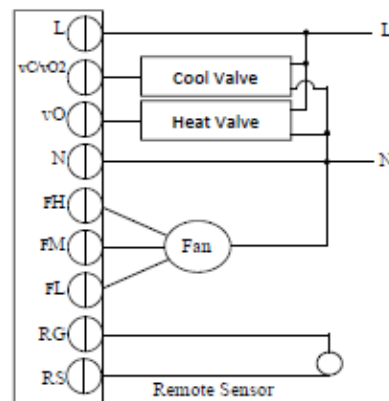


Fig. 2. Honeywell VC4013/VN4013/VS4016 Wiring

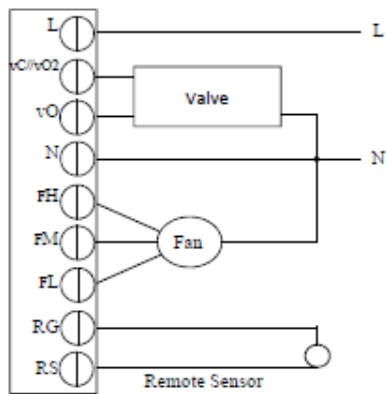


Fig. 3. Honeywell VC6013/VN6013 Wiring

Item	Terminal	Description
1	L	Live wire
2	vC/ vO2	Heating valve close/Cooling valve close 2 pipes only /Cooling valve open 4 pipes (VC/VN 4013) only
3	vO	Heating valve open/Cooling valve open 2 pipes only Heating valve open 4 pipes (VC/VN4013)only
4	N	Neutral wire
5	FH	High speed fan
6	FM	Medium speed fan
7	FL	Low speed fan
8	RG	Ground for remote setback
9	RS	Remote sensor

## ISU (Installation Setup)

Press and hold the “mode” and “up” buttons together for more than 3 seconds to enter or exit ISU. Change the ISU code by pressing the “mode” button and then change the option setting by pressing the “up” and “down” button refer to the following introduction.

ISU Code	Description	Options
1	System Type	0 Heat only
		1 Cool only
		<b>2 Two pipes heating/cooling manual (Default)</b>
		4 Four pipes manual
		5 Four pipes auto
2	Remote sensor	<b>0 Onboard Sensor (Default)</b>
		1 Remote Sensor (NTC20K)
3	Temp. Scale	0 °F
		<b>1 °C (Default)</b>
4	Fan control Type	0 Auto only
		1 manual only (3 speed: Low→Med→High→Low)
		<b>2 users can choose auto or manual (Default)</b>
5	Switching Differential for 4-pipe Auto Changeover With Single Setpoint	1°C (2°F)
		<b>1.5°C (3°F)(Default)</b>
		2°C (4°F)
		3°C (5°F)
6	CPH (Heat)	1~12 <b>4(Default)</b>
7	CPH (Cool)	1~6 <b>3(Default)</b>
8	Display Temp. adjustment	-2~2°C, 0.5°C. <b>Default 0°C</b> (-4~4°F, 1°F. <b>Default 0°F</b> )
9	Temp. Display	<b>0 room temp. (Default)</b>
		1 set point
10	Heating Range Stops	10~32°C. <b>Default 32°C</b> (50~90°F. <b>Default 90°F</b> )
11	Cooling Range stops	10~32°C <b>Default 10°C</b> (50~90°F. <b>Default 50°F</b> )

ISU Code	Description	Options
12	Keypad lockout	<b>0 All keys are available (Default)</b>
		1 system button locked out
		2 Fan and system button locked out
		3 All button locked out except power button
		4 All button are locked
13	Remote Setback enable method	0 Hotel card NO
		1 Hotel card NC
		<b>2 Button (Default)</b>
14	Remote Setback Heating Setpoint	10~21°C. <b>Default 18°C</b> (50~70°F. <b>Default 64°F</b> )
15	Remote Setback Cooling Setpoint	22~32°C. <b>Default 26°C</b> (72~90°F. <b>Default 79°F</b> )
16	Freeze Protection	0 Disabled
		<b>1 Enabled (Default)</b>
17	Power Recovery status	0 OFF
		<b>1 Previous status (Default)</b>
19	Fan mode in ES Mode	<b>0 Run as Auto when ISU_4=2 (Default)</b>
		1 Run as low when ISU_4=2

**Honeywell**

### Automation and Control Solutions

Honeywell Environmental and Combustion Controls (Tian Jin) Co., Ltd  
No. 158, NanHai Road  
Tianjin Economic-Technological Development Area  
Tianjin, 300457, P.R.C.

Subject to change without notice.